



V-REST MONOPOD SHOOTING STAND

PICATINNY QD LEVER LOCK MOUNT,
V-REST, & CAMERA MOUNT

TL-MPI50Q



FEATURE ILLUSTRATION

Ergonomic Textured Non-Slip Rubber Hand Grip for the Greatest Comfort and Reliability

Rugged Yet Lightweight Aluminum Construction with Modern Design and Matte Black Finish

Lightning-fast Spring-loaded 3-Stage Leg Extension with the Press of a Button

Heavy Duty Non-slip Rubberized Foot Pad

Quick Detachable Lever Lock with Full Adjustability

3-Stage Extendable Leg with 7 Notches for Fixed Locking Positions, and Flexible In-between Notch Extension Positions with Locking Wheel

Leg Adjustment Push Button

Lockable Thumb Wheel for Secure Leg Position Locking

US PAT. 8,397,421

**U.S. PAT. 8,397,421
LEVER LOCK PATENT**

CENTER HEIGHT
20.5" - COLLAPSED
33.25" - STAGE - 1
46" - STAGE - 2
58.75" - STAGE - 3

Variable Height Design for Optimal Situational Comfort and Performance



PICATINNY MOUNT
(For Picatinny/Weaver Rails)



V-REST
(Universal Gun Rest)



CAMERA MOUNT
(For Cameras, Range Finders, Spotting Scopes and Many Other Devices)

USER INSTRUCTIONS

PICATINNY MOUNT INSTALLATION

- Turn the cam lever to its unlocked position. Place the monopod on the rail at a desired position.
- Turn the cam lever half way to the locking position. Use step 3 to complete proper adjustment.
- Use the included Allen wrench to adjust the hex screw at the side of the cam for proper tension and fit against the rail. Adjust clockwise to increase the tension and tighten the clamping width. Adjust counter-clockwise to decrease the tension and increase the clamping width.
- Once you achieve the optimal tension, push the Cam Lever all the way to the left for a positive lock onto the rail. You may repeat Step 3 and 4 to find the best clamping tension and locking position.

V-REST INSTALLATION

- Install the V-Rest Block to the mounting deck by following the **PICATINNY MOUNT INSTALLATION** instructions (above).
- Remove the rubber strap from one of the Holding Pins.
- Rest the forend of the firearm onto the V-Rest Block at desired spot.
- Secure the firearm with the rubber strap by pulling it over the forend of the firearm and re-attaching it to the Holding Pin. Make adjustments if needed.

CAMERA MOUNT INSTALLATION

- Place the threaded bolt of the camera mounting plate into the mounting hole on bottom of camera.
- Make sure the Picatinny rail of the camera mount is aligned parallel to the lens of the camera.
- Once aligned properly, use the thumb knob to tighten the bolt into the base of the camera.
- Install the Camera Mount to the mounting deck by following the **PICATINNY MOUNT INSTALLATION** instructions (above).

LEG EXTENSION/RETRACTION INSTRUCTION

- Make sure the Posi-lock Wheel is fully released by turning it counter-clockwise.
- For rapid spring-loaded extension of the leg, press down the Leg Adjustment Push Button to release the leg section. Either fully extend or hold the Push Button to adjust the leg to a pre-cut notch. Tighten the Posi-lock Wheel clockwise to lock securely.
- To extend to any location in between notches, press down the Leg Adjustment Push Button and adjust the leg to the desired position before releasing the button. Lock the leg by tightening the Posi-lock Wheel clockwise.
- To retract the bipod leg, loosen the Posi-lock Wheel first. Press and hold down the Leg Adjustment Push Button before you push the extended leg upward into the housing. Lock the leg with the Posi-lock Wheel.

MUB015031409

OWNER'S MANUAL

LEAPERS, INC.



Under The Gun

THE BEST NEVER REST

Website: www.leapers.com
Telephone: 734-542-1500
E-mail: office@leapers.com