

UTG M70 TACTICAL QUAD RAILS

MNT-HG470A


- Fits Yugoslavian M70 AK and Variants
- Precision Machined with Maximum Strength
- Innovative Top and Bottom Covers with Mating Feature and Tight Tolerance
- Simple and Friendly Installation, No Gunsmith or Tool Required
- Innovative Design without Interference with Grenade Sight or Under-folded Stock
- Solid Locking Features for Most Secure Fit
- Ultimate Tactical Solution to Enhance Accuracy under Toughest Environments
- Hard Anodized Finish for Wear Resistance
- UTG Rubber Rail Guards Included for Great Comfort and Protection

UTG

M70 TACTICAL QUAD RAILS



MNT-HG470A

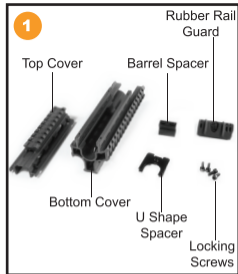

1. Separate the pre-assembled mount and arrange all parts on a flat surface.



2. Remove the cleaning rod from the rifle.



3. Press the Release Button to lift and remove the receiver cover.


UTG M70 TACTICAL QUAD RAILS

MNT-HG470A

With UTG Scope and Accessories



Caution: Make sure firearm is not loaded. Remove magazine and examine chamber. Use safe handling procedures at all times.

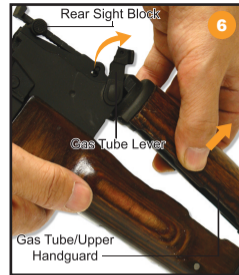

13. Fit the Bottom Cover onto the barrel and make sure the fit is even and level.


14. Fit the Top Cover onto the gas tube. Make sure the two Connecting Walls of the Bottom Cover fit into the two Mating Channels of the Top Cover.

15. Evenly tighten all four screws to securely lock the top and bottom covers.

4. Push the Release Button again to lift and remove the action spring and the retaining rod.

5. Remove the bolt and the bolt carrier, including the gas piston attached to the bolt carrier.


6. Open the grenade sight. Lift and push forward the Gas Tube Lever next to the Rear Sight Block and take out the Gas Tube/Upper Handguard Assembly.

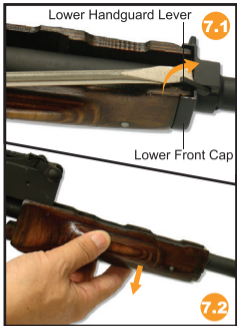

7. Unlock the Lower Handguard Lever on the Lower Front Cap. Remove the Lower Handguard.




8. Twist the Upper Handguard to separate the handguard from the gas tube.

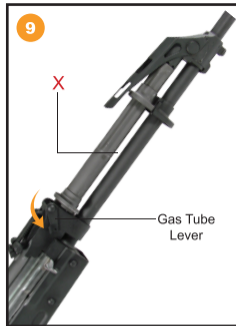


9. Lock the lower handguard lever on the lower front cap. Replace the gas tube and lock it down by turning the Gas Tube Lever back and downward.



10. Replace the bolt and bolt carrier, action spring and retaining rod, and the receiver cover. Make sure everything works smoothly.

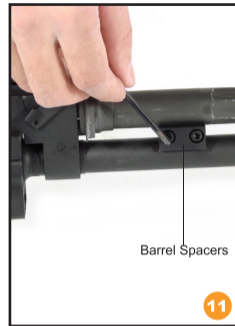

11. Place the 2 Barrel Spacers between the barrel and the gas tube at about Position X shown in 9. Tighten the 2 screws to lock the spacers firmly. The Barrel Spacers will prevent over tightening of the top/bottom covers and allow for normal operation of the piston.

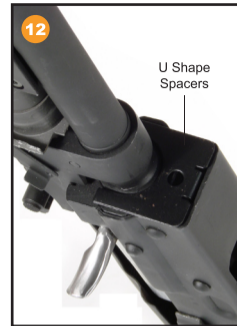

12. Fit as many U Shape Spacers as needed at the front of the receiver before rails are installed. The U shape spacers should be snugly fit into the U shape opening against the barrel.