



**U988Q**

**MODEL 47**

**TACTICAL QD LOW-PROFILE RAIL SYSTEM**

MTU014

- Fits Romanian, Chinese and U.S. AKs
- Also Compatible with Saigas with Rear Sight Blade and Fixed Buttstock
- Innovative 3-point Modular and Adjustable Locking System with Optimal Low Profile and Most Secure Fit
- Integrated Backup Rear Iron Sight with Precision Windage Adjustment
- Easy and Friendly Mount Installation - Simply Replace the Rear Sight Blade with Sight Rail, and Bolt the Rear Assembly into the Buttstock for Rock Solid Installation
- Clever, Quick-detach, Flip-open Design for Convenient Gun Cleaning and Zero Retention
- 19 Rail Slots for Flexible Use of Scopes, Dot Sights, Magnifiers and Other Accessories
- Matte Black Mil-spec Hardcoat Anodizing the Ensuring Best Wear Resistance and Long Term Durability

MUM029011207



MTU014


**U988Q**

**MODEL 47**

**TACTICAL QD LOW-PROFILE  
RAIL SYSTEM**

Made in USA

**Caution:** Make sure firearm is not loaded. Remove magazine and examine chamber. Use safe handling procedures at all times.

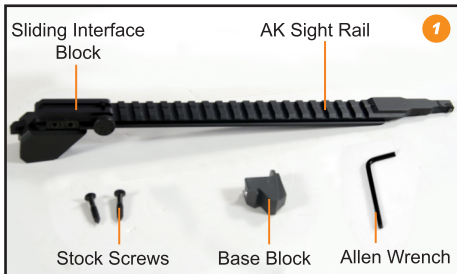

1. Layout all components and arrange them on a flat, well-lit working surface. The kit should contain:
  - Pre-assembled AK Sight Rail with Sliding Interface Block
  - Base Block
  - Stock Screws (Including 1 spare screw)
  - Allen Wrench



2. Press the Release Button (recoil spring guide) to lift and remove the receiver dust cover.

**Note:** Barrel Direction: ←BL (Pointing Left) or BR→ (Pointing Right)


1

## MUT014 Accessorized with UTG SCP3-1424CDQ Scope

MTU014

(Scope not included)



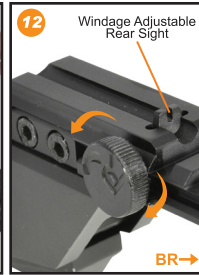


10. While holding the Sliding Interface Block rearward with complete engagement to the Base Block in between the upper and lower latches, tighten the locking screws (15in-lbf) to secure this firm locking position. This completes the installation of the sight rail. Please reference Step 4, 3 and 2 to re-assemble gas tube/upper handguard, bolt carrier group, recoil spring guide and receiver dust cover.

11. Gun Cleaning: Press the Release Latch Button on the Sliding Interface Block and lift the Sight Rail upward for speedy and convenient routine maintenance. Please handle this operation carefully. Avoid any sudden drop or bent of the Top Rail Assembly during the process.

12. The Sight Rail comes complete with a Windage Adjustable Rear Sight.


**CAUTION:** Always depress the Release Latch Button to engage or disengage the rail to minimize wear on the latch contact/locking surfaces and to ensure rail longevity.

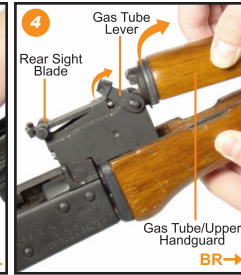

3. Push the Release Button to remove the action spring and then remove the bolt carrier group.

4. Lift and push forward the Gas Tube Lever next to the Rear Sight Blade and remove the Gas Tube/Upper Handguard assembly.

5. Depress the Leaf Spring under the Rear Sight Blade with a rear sight removal tool or a screw driver, and pull the Rear Sight Blade out at about 45° angle along the cut grooves inside the Rear Sight Block.

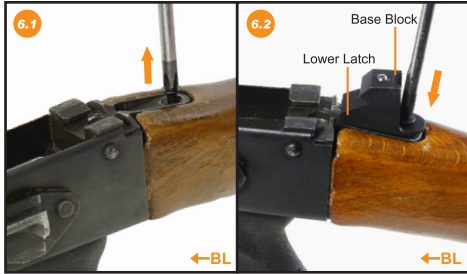


6. Remove the stock screw from the rear receiver trunnion and install the Base Block with either the original screw or the provided Stock Screw that comes with the kit. Make sure the Lower Latch of the Base Block is facing the receiver. Tighten the screw securely.



7. Holding the narrow, front end of the Sight Rail at an approximately 45° angle to the gun body, insert into the rear sight slot to click into position.



8. With the included Allen Wrench, loosen the two locking screws on the Sliding Interface Block of the Sight Rail, stopping right before the threads become completely disengaged. Be careful not to lose the locking screws.

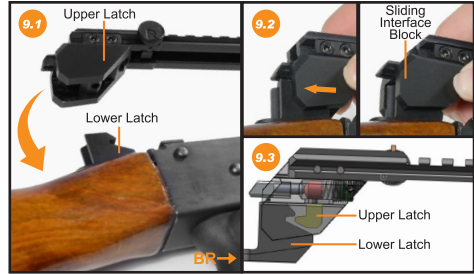

9. Lower the Sight Rail onto the Base Block (Fig. 9.1). Pull the Sliding Interface Block rearward to obtain complete engagement between the Upper Latch in the Sliding Interface Block and the Lower Latch in the Base Block (Fig. 9.3). A 20mm forward-backward adjustment range is provided by the Sliding Interface Block to allow secure mount installation on different AK variants.