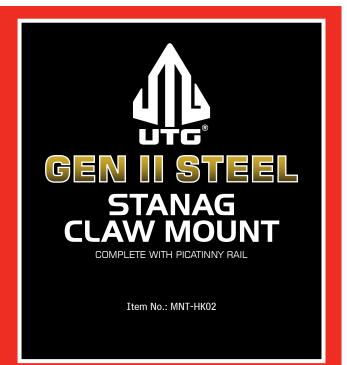**UTG**

GEN II STEEL
STANAG CLAW MOUNT
COMPLETE WITH PICATINNY RAIL

Item No.: MNT-HK02

- Designed for H&K Firearms & Other Compatible Variants with Standard Receiver Dimensions
- Robust Steel Construction with Precision Machining and Matte Black Finish
- Smooth and Rock Solid Quick Lock/Release Installation
- High-profile with See-through Feature Allowing Use of Iron Sights
- Two Piece Design Including a Detachable Steel Picatinny Rail to Work with Stanag Dimension Devices as Well as Picatinny Applications
- Great Zero Retention Capability for All Accessories Installed on the Rail

MUM03901131

UTG

GEN II STEEL
STANAG CLAW MOUNT
COMPLETE WITH PICATINNY RAIL

Item No.: MNT-HK02

GEN II STEEL STANAG CLAW MOUNT INSTALLATION GUIDE
MNT-HK02

This mount is designed for H&K firearms and other compatible variants with standard receiver dimensions. It will not fit Cetme rifles or variants with over-sized receivers.

Caution: Make sure firearm is not loaded. Remove magazine and examine chamber. Use safe handling procedures at all times.

Locking Lever

Locked Position

Release Lever

Unlocked Position

Mounting Tabs

Locking Screw

①

Before installing, verify that the claw feet of the mount are in an "unlocked position". If the mount is in a locked position, to unlock, first pull down the Locking Lever until it clicks. Press and hold down the Release Lever while returning the Locking Lever to its upward position until it snaps into place. Your mount is now un-locked.

②

Place the mount on the receiver of your firearm, with the fixed claws facing the ejection port side. Properly align the claws to the Mounting Tabs on the receiver.

Note: Mounting Tabs on some H&K rifle variants are reversed on the sides of the receiver. If your rifle is one of them, you would not be able to pull the Locking Lever down in ❸. To install the mount on your rifle, switch its direction so that the fixed claws go on the opposite side.

③

Pull down the Locking Lever until it clicks and then return the Locking Lever to its upward position until it snaps into place. The mount is now installed on the receiver. To un-install, follow Step 1 to un-lock the claws before removing the mount from the rifle.

④

This claw mount comes pre-installed with a Picatinny rail ready for any Picatinny application. To use the mount for STANAG applications, remove the top rail by unscrewing the 2 Locking Screws from its underside using a flathead screwdriver. Re-use the Locking Screws to install a STANAG device, such as a scope, on the claw mount.