



G3 TACTICAL TRI-RAIL HANDGUARD SYSTEM

MNT-HGG3TR

- One-Piece Design Quick Fit Metal Tri-rail Handguard System for G3 and Variants
- Adopts Original Handguard Dimensions for Most Solid and Secure Fit
- 29 Slots Each on Left, Right and Bottom Rails
- Perfect Fit on Both Original German Versions and US Clones
- Friendly Installation, No Gunsmithing Required



MNT-HGG3TR


G3 TACTICAL TRI-RAIL HANDGUARD SYSTEM




G3 TACTICAL TRI-RAIL HANDGUARD SYSTEM

MNT-HGG3TR

Caution: Make sure firearm is not loaded. Remove magazine and examine chamber. Use safe handling procedures at all times.

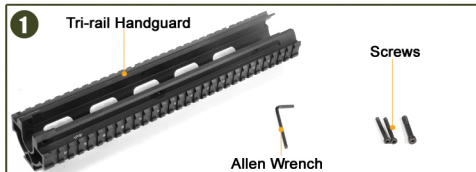

1. Separate the pre-assembled Tri-rail Handguard and arrange all parts on a flat surface.

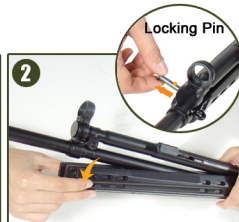

2. Remove the Locking Pin from the gas tube block, and remove the original plastic handguard from the rifle.



3. Position the Tri-rail Handguard under and parallel to the barrel about 1" below. Tilt the rear end of the Handguard upward, and push it backward to secure into the lower receiver firmly.



4. Push the front end of the Handguard upward to make sure that the Handguard surrounds the barrel evenly.



5. Align the 2 screw holes at the front side of the Handguard with the Locking-Pin hole on the gas tube block. Tighten the front screw with provided Allen wrench to lock the Handguard firmly.



6. Tighten the two rear screws evenly to complete the Tri-rail Handguard installation.



7. Install Rubber Rail Guards if required. Put on Flashlight, Laser Sight, Bi-pod, Foregrip and other excellent UTG accessories on the mount for most practical and versatile applications.