

180MM X 98MM



MODEL 4/15 2-PIECE DROP-IN CARBINE LENGTH QUAD RAIL SYSTEM

Fits Carbine Length Model 4/15 Rifle with
Delta Ring & Round Front Cap
Item No.: MTU001T

- Proudly Designed and Manufactured in USA
- Fits Carbine Length Model 4/15 Rifle with Standard Delta Ring Assembly, Barrel Nut and Round Front Handguard Cap
- Top Rail Extending to Upper Receiver for Continuous Mounting Platform
- Includes Top and Bottom Covers with 18 Slots on Top Rail, 17 on Bottom, 16 on Each Side
- Lightweight Profile for Most Positive Handling
- Precision Machined from Aircraft Aluminum with Black Anodizing
- Simple and Friendly Installation, No Gunsmithing Required

MTU001T-2017-1401




MODEL 4/15 2-PIECE DROP-IN CARBINE LENGTH QUAD RAIL SYSTEM

Fits Carbine Length Model 4/15 Rifle with
Delta Ring & Round Front Cap
Item No.: MTU001T
Made in USA

MODEL 4/15 DROP-IN QUAD RAIL INSTALLATION GUIDE

MTU001T

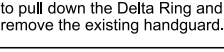


Separate the Top Cover (with 3 rails) from the Bottom Cover (with 1 rail). Use the handguard removal tool to pull down the Delta Ring. Use the flush cut side of the Top Cover to enclose and cover the Round Front Handguard Cap. Slowly drop the Tapered Rear End of the Top Cover into the Barrel Nut by aligning the 2 inner Spinal Cords against the Central Groove Area in the Barrel Nut.



Once fit into position, release the Delta Ring to cover the Tapered Rear End of the Top Cover snugly. If the extended Top Rail of the Top Cover is not centered with the receiver, minor adjustment of the Barrel Nut is required. Remove the Top Cover to adjust the Barrel Nut position. Repeat step 2 and 3 until the optimal indexing is achieved.



Use the handguard removal tool to pull down the Delta Ring. Slowly drop the Tapered Rear End of the Bottom Cover into the Barrel Nut by aligning the 2 inner Spinal Cords against the Central Groove Area in the Barrel Nut. Use the non-tapered side of the Bottom Cover to enclose and cover the Round Front Handguard Cap. Release the Delta Ring to secure the Tapered Rear End of the Bottom and Top Cover.

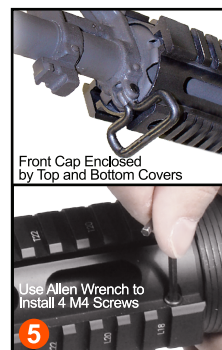

Once the Top and Bottom Covers are correctly installed, the front end of the handguard should enclose the front cap. They do not seat inside or under the Round Front Cap. Use 4 screws and the supplied Allen Wrench to secure the Top and Bottom Covers together by cross-tightening the screws. The quad-rail is now ready for accessory installation.

Caution: Make sure firearm is not loaded. Remove magazine and examine chamber. Use safe handling procedures at all times.

Note: Do not over tighten or use power tools for all fastener installation. If desired apply small amount of locking compound to the threads prior to tightening.