


UTG KeyMod Rail Panel Cover Installation



1. Insert the 3 Keymod Guides into the larger opening of the Keymod slots on the handguard. Note that one Rail Panel Cover requires and is designed to protect the length of 7 Keymod slots.

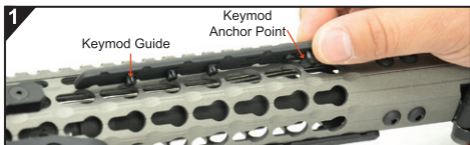

2. Slide the Rail Panel Cover Forward so that all 3 of the Keymod Guides engage the smaller openings of the Keymod slots on the handguard. Exert downward pressure on the Rail Panel Cover to ensure that the 3 Keymod Guides fully seat. Slightly bend the Rail Panel Cover as Depicted in Fig. 2 to achieve this.



3. With the 3 Keymod Guides engaged within the Keymod slots, the Keymod Anchor Point will be properly indexed. Apply downward pressure on the Keymod Anchor Point until it clicks and securely locks into place within the larger opening of the Keymod slot.